




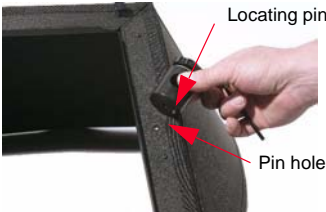
The black fabric shell of the wide-angle hood is shipped already attached to the lower edge of the square metal frame. You will need to perform the following steps:



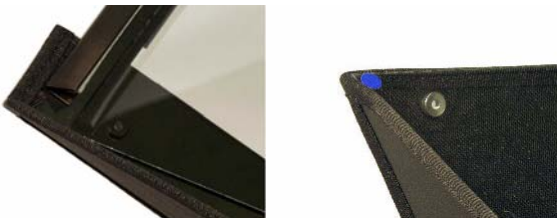



1. secure the side panels to the frame
2. attach the tube clamps
3. attach the lower glass retaining strip
4. remove the upper glass retaining strip
5. insert the semi-reflective glass panel
6. re-attach the upper glass retaining strip
7. attach the elasticated fabric light baffle.

NOTE: Before beginning the hood assembly, ensure you have all the components required as illustrated in the photograph below.



CAUTION: The glass panel is fragile. Take great care when handling it and the completed hood.

<p>1 Open the side panels of the hood and fold the flaps over the black metal frame.</p> 	<p>2 Secure a side panel flap with four of the supplied M3 screws.</p>  <p><i>Repeat for the opposite flap.</i></p>
<p>3 Push the threaded pins of the lower Glass Retaining Strip through the holes in the wide-angle hood frame and secure in position with the supplied Screw Posts.</p>  <p><i>Ensure the retaining strip is on the inside of the hood as illustrated.</i></p>	<p>4 Remove the large screw from a tube clamp and position the clamp so that the locating pin aligns with the small hole adjacent to the tube clamp screw hole in the metal frame.</p>  <p><i>Repeat for the second tube clamp. The locating pins ensure the holes in the tube clamps are orientated correctly.</i></p>

<p>5</p>	<p>Use the supplied screws to secure the tube clamp in position using an Allen key or similar tool.</p>  <p><i>Repeat for the second tube clamp.</i></p>	<p>6</p>	<p>Remove the upper Glass Retaining Strip by unfastening the two thumb screws securing it to the top edge of the hood.</p> 
<p>7</p>	<p>Insert the shorter edge of the semi-reflective glass panel into the lower Glass Retaining Strip.</p>  <p><i>Ensure the blue dot is on the side of the glass facing you.</i></p>	<p>8</p>	<p>Position the upper Glass Retaining Strip over the edge of the glass panel and re-attach with the thumb screws that were removed in step 6.</p> 
<p>9</p>	<p>Place the assembled hood, glass panel face down, on a solid, stable surface.</p> 	<p>10</p>	<p>Carefully stretch the elasticated end of the fabric light baffle around the four screw posts on the rear of the frame.</p> 
<p>11</p>	<p>WIDE-ANGLE HOOD FULLY ASSEMBLED</p> 